



I talk and move!

over
30
seconds




Voice Activated Uni™ Instruction Guide


Congratulations! You are now a proud owner of an official Voice Activated NEOPETS™ neopet! Your virtual friend online can now be your best friend at home. Each neopet has its own personality and behaves differently with sounds, motions and lights! It knows when you talk to it and even when you pick it up. Playing with your special friend is easy, follow the instructions below and enjoy!

Removing Your Neopet From The Package: (Adult Assistance Required) Ask an adult to help unpack Uni as shown (diagrams A1-A2). Your Voice Activated Neopet comes with two 'N' batteries for Try Me store demonstrations only. Battery life may be impaired. We recommend replacing the batteries after purchase (see Battery Instructions).

A1. Loosen screws on the underside of base as shown.

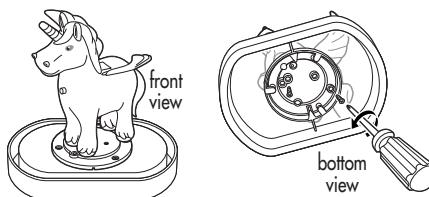


A2. Detach neopet from the base.

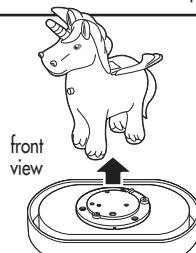

A3. For full function regular use, set function selector to OFF for five seconds, then switch to PLAY position.


Function Selector
(Try Me/Off/Play)

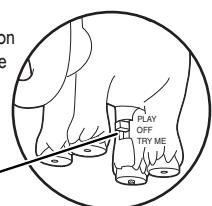

Discard all screws and packaging attachments before giving the toy to a child. Keep small parts away from young children.

Play Instructions: It's fun to play with Uni! It'll respond when you (1) press the TALK button (diagram B), (2) speak to it, (3) pick it up or place it down. For full function regular play, set function selector to OFF for five seconds, then switch to PLAY position (diagram A3). The very first time the function selector is set to PLAY, Uni's mood is set to Content. After playing for a while, and depending on how you treat your neopet, its mood may change to Happy or Not-So-Happy. Try reading your friend's happiness level by its lights (see The 3 Moods Of Your Neopet).

Uni will respond every time you speak or press the TALK button. If there's no command from you, it'll try to catch your attention by making short sounds and/or motions with lights. When it has been left idle for a while, it'll yawn and go into '**Sleep**' mode to save battery life. Press the TALK button and it'll wake up (to the mood prior to sleeping). You may also turn off the power by setting the function selector to OFF. To resume playing, switch the selector to PLAY and press the TALK button.

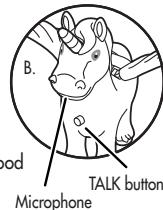

1. TALK Button: Uni loves to talk to you! With the function selector set to PLAY, press the TALK button (diagram B) and your neopet will talk with motion and lights. Its reactions will depend on its current mood. For example, it'll respond happily if in a happy mood. When you want to hear your neopet speak and watch it move (in its current mood only), use the TALK button. Note: You can switch to voice activation anytime by speaking to your neopet (see Voice Activation).

2. Voice Activation: Uni can hear you and respond with sound, motion and lights! It's easy! Place your neopet in front of you and speak to its hidden microphone (diagram B) at a close distance. It'll respond after you've started talking (approx. 4 seconds). To continue, wait until it has finished talking or moving before speaking to it again. Remember to set the function selector to the PLAY position and make sure your neopet is not in sleep mode.

NEOPETS, and all characters, logos, names and related indicia are trademarks of NeoPets, Inc., © 2003. All rights reserved. Used with permission.

Visit us at www.thinkwaytoys.com



3. Picking Up/Placing Down Your Neopet: Uni is smart! It knows when you pick it up or place it down with the help of a sensor on the bottom (diagram C). Every time you pick up your neopet, its happiness level rises! Its wings flap as it makes happy sounds with a light-up mane and horn. When you place it down, it'll thank you with another special sound. Note: If you pick up Uni but place it down almost immediately, it will ignore the action. Similarly, if you place it down and pick it up again too quickly, it'll ignore the motion.

The 3 Moods Of Your Neopet:



Content Speak to Uni in a normal voice (not harsh or loud) and it'll flap its wings and talk back. You'll know it's content by the three lights flashing simultaneously on its mane and horn. Try not to chat for too long as your neopet will get tired and its mood may change. After talking for twenty consecutive times, it'll take a nap and go into sleep mode. Tip: Use short phrases and pick up Uni to play often!



Happy Talk softly to your magical neopet and it'll be pleased. It'll flap its wings, giggle, laugh or hum a tune. Even the three lights on the horn and mane will seem to be dancing from yellow to green to red! Tip: The more you use a soft tone, the happier Uni will be.



Not-So-Happy Ssssshhh! When you raise your voice to Uni, it'll be upset and won't be afraid to tell you. It'll respond with a glowing horn and mane. Its wings flap as it complains. If you speak loudly three consecutive times, it'll remain in this mood until you pick it up to play or talk to it in a normal or soft tone. Then, it'll perk up and return to its previous mood (content or happy). Tip: You may need to talk softly a few times to boost Uni's happiness level before it returns to a happy mood again.


Playing With Two Or More Neopets: (Each sold separately) It's lots of fun with more than one neopet! First, place the neopets close together (diagram D). When they've stopped talking or moving, wait another second, then press any neopet's TALK button and they will talk and interact with each other by responding to each other's voices! (Note: If the neopets are in sleep mode, press all their TALK buttons once to wake them up). You can join in by speaking to the group when the others have stopped talking or moving. The neopets will continue chatting until they're tired and go into sleep mode to rest. You may want to end the chatting before then to save battery life.

Battery Instructions: Gently twist tail to detach. Ask an adult to help open the battery cover with a Phillips screwdriver (diagram E) and replace with two new alkaline 'N' batteries (not included) as shown. Do NOT use rechargeable batteries. Replace cover and reattach tail.

CAUTION: To Avoid Battery Leakage - Be sure to insert batteries correctly and follow the toy and battery manufacturers' instructions. Never mix old batteries with new batteries, or mix Carbon-Zinc, alkaline or Nickel-Cadmium batteries. Always remove exhausted or dead batteries from the product. Dispose of batteries safely. Batteries inside this product may explode or leak when in contact with fire.



Helpful Hints:

1. For regular play with full functions, make sure the function selector is set to the PLAY position (diagram A3).
2. For best results, place your neopet in front of you and speak to the hidden microphone at a close distance (diagram B).
3. Always wait until your neopet has finished its responses (sounds, lights and action) before speaking to it again.
4. If your neopet's tail or wings become detached, simply align the slots on the body and the wings or tail and press into position.
5. When the voice/sound start to distort or slow down, or when the lights start to dim, replace batteries with new 'N' batteries.
6. Remove batteries and set the function selector to OFF position before storing the neopet away for a long period of time.
7. Do NOT throw the neopet against or drop it on any hard surfaces. Do NOT immerse it in water or play with it in a wet environment.
8. **If you drop your neopet and it does not respond, try replacing the batteries.**

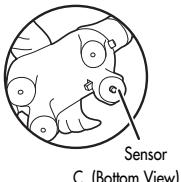

C. (Bottom View)

Hint:
Turn power to OFF to reset your neopet's mood back to content.

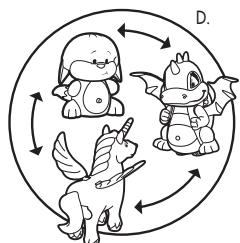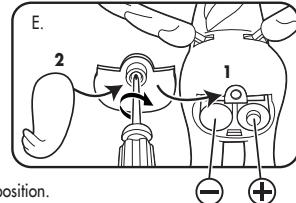

NINETY DAYS LIMITED WARRANTY

THINKWAY warrants to the original consumer purchaser that this toy product will be free from defects in material or workmanship under normal use for a period of ninety (90) days from the date of the original retail purchase. This warranty does not cover damage resulting from accidents or any external cause, misuse or abuse. Valid only in North America. This product meets or exceeds the safety requirements of F963.96a.

Questions or Comments? Call us any time:

THINKWAY Consumer Services
1-800-535-5754