


Battery Instructions: Two AAA batteries have been installed for in-store demonstrations. Battery life may be impaired. To replace batteries, open flap on the top and retrieve battery case. **IMPORTANT:** Turn power off (set selector to OFF) before replacing batteries or it may cause the Plushie to malfunction. Ask an adult to open the battery cover with a screwdriver and replace with 2 new AAA batteries as shown (not included). Reattach cover and screw. Set selector back to ON and return battery case to the Plushie.

Play Instructions: To play with your Noil, squeeze its left ear and it responds with light-up cheeks and sounds. Squeeze its ear again for a different response (sometimes it'll even sneeze!).

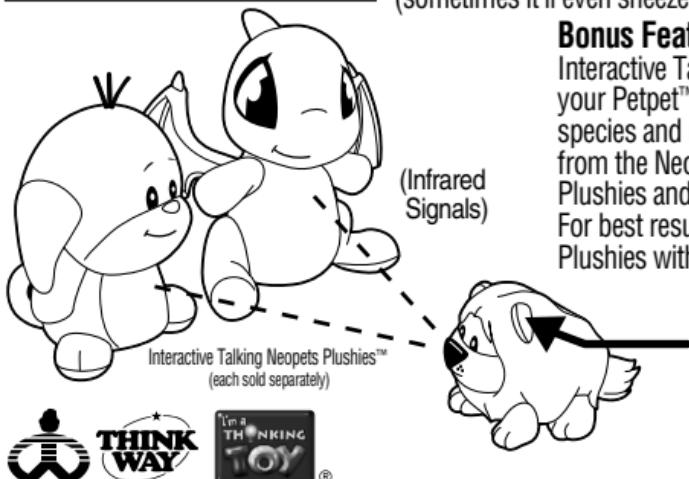

Bonus Feature: Bring your Noil to any already activated Interactive Talking Neopets Plushies™ and squeeze the left ear of your Petpet™. The Neopets Plushies will recognise the Petpet by species and react! Squeeze its ear again for a different response from the Neopets Plushies. Your Noil will cheer up any Neopets Plushies and make them feel better if they are unhappy or unwell. For best results, place your Petpet Plushie facing the Neopets Plushies within a 10" distance as shown.

No. 13605.
Printed in China.

NEOPETS, and all characters, logos, names and related indicia are trademarks of NeoPets, Inc., © 2003. All rights reserved. Used with permission.